




RENOSTONE

DECORATIVE STONE / PIERRE DÉCORATIVE

Installation Guide

Non Combustible Concrete Mantel

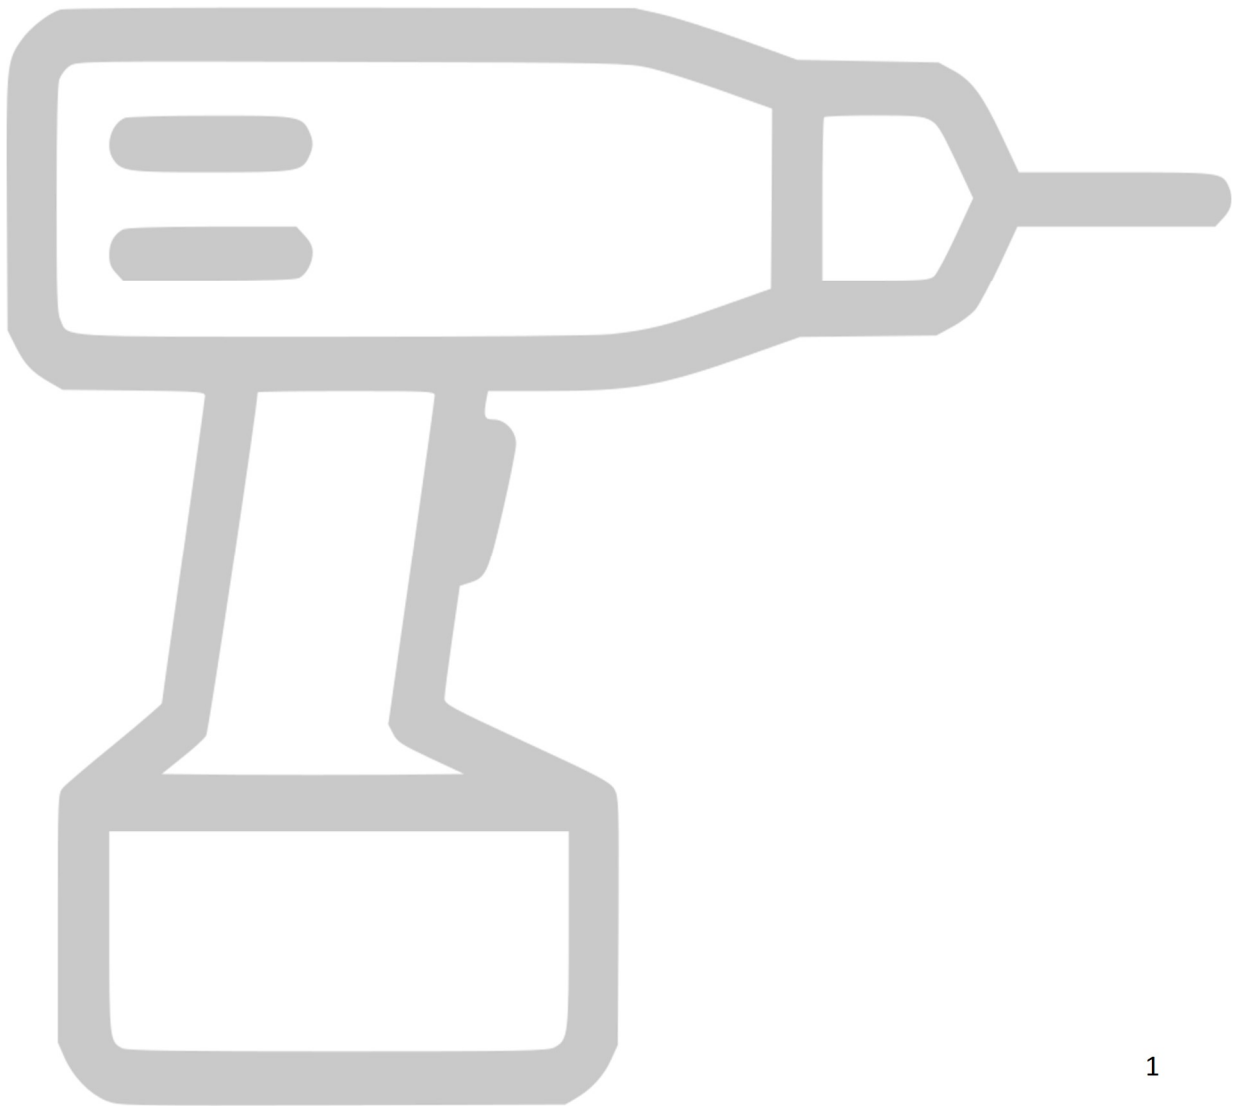

In the Box

- Renostone Mantel
- Mounting Bracket

Tools Required (not provided)

- Electric Drill/Driver
- Screw Drivers/Bits
- Level
- Tape Measure
- Stud Finder
- Pen, Pencil or Marker
- Self-Tapping Screw
- Lag bolt

Optional (not provided)

- Construction Adhesive

Installation Notes

- It is recommended that two people are available to lift and install the mantel.
- Bracket must be installed into wall studs.
- If you are unable to find studs, you need to open the wall and add wood or metal studs.
- It is recommended to utilize a minimum of three studs for 4' & 5' mantels
- It is recommended to utilize a minimum of four studs for 6' mantels.

Installation Instructions

1. Locate and mark stud locations, install studs if required.
2. Unpack mantel & mounting bracket
3. Mark the center of the mantel location on the wall
4. Determine the desired height for the mantel, draw a horizontal line
5. Center mounting bracket, mark stud locations on bracket
6. Using a 3/16 drill bit, drill two 3/16 holes in mounting bracket per marked stud locations
7. Secure mounting bracket to studs using lag bolts, start in center, checking for level
8. Dry fit the mantel on the bracket and check for level, adjust bracket if necessary
9. With the mantel in place, centered over the mounting bracket, confirm the location by marking one end of mantel on the wall with a pencil
Optional: Apply construction adhesive on the back of the mantel to secure against the wall.
10. Enjoy the beauty of your new non-combustible mantel!



Contact sales@renostone.com

601 Auguste Mondoux,
Gatineau, QC,
Canada, J9J 3K2
www.renostone.com

